
 
Hinge adjustments

COMPACT series

 
(See inside for adjustments and installation instructions.)

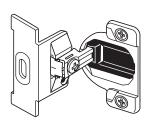


COMPACT 33 series Large overlay



COMPACT 33 series Small overlay



COMPACT 38C/39C series Large overlay

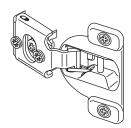

COMPACT 38N series Small overlay

Blum, Inc. 7733 Old Plank Rd. Stanley, NC 28164 toll free 800-438-6788 local 704-827-1345 fax 704-827-0799 internet www.blum.us



COMPACT 33 series	COMPACT 38C/39C & 38N series				
Side adjustment	Large overlay	Small overlay	Side adjustment	Large overlay	Small overlay
Loosen front screw, position door, tighten screw. Range = 1/8" (3mm)			Turn front screw counter-clockwise to increase door overlay, clockwise to decrease. Range = 1/8" (3mm)		
Height adjustment			Height adjustment		
Loosen screw(s) on the mounting plate. Adjust door to position and tighten screw(s). Range = 9/32" (7mm)			Loosen center screw. Adjust door to position and tighten screw. Range = 1/4" (6mm)		
Door removal			Door removal		
Loosen side adj. screw. Slide hinge off mounting plate towards center of cabinet.			Turn back screw counter-clockwise to increase door gap, clockwise to decrease. Range = -1/32" (1mm) + 3/32" (2mm)		
Door installation					
To reinstall reverse procedure, tighten screws on all hinges.					

