


7800 SERIES


Partial extension undermount slides for frame and frameless cabinets installation

16mm Drawer installation dimensions(with locking device)

SKW = Internal Drawer Width LW = Internal Cabinet Width

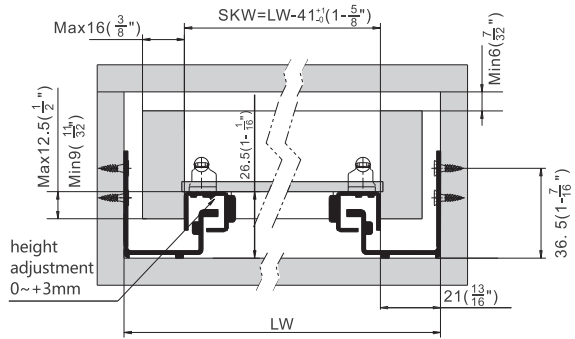


NL(mm)	Runner length (mm)	LT(mm)		AV(mm)
		Max	Min	
229(9")	272	299	284	53
305(12")	329	375	341	72
381(15")	405	451	417	92
457(18")	482	527	494	91
533(21")	558	604	570	91

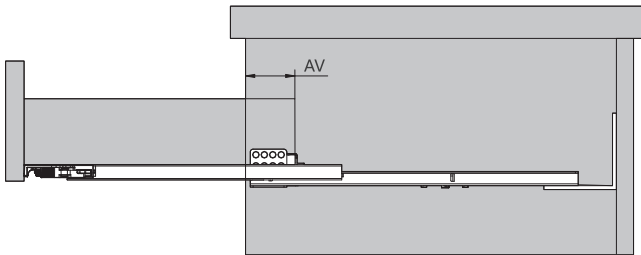


Standard drawer installation dimensions


NL = Nominal Slide Length LT = Internal cabinet Depth

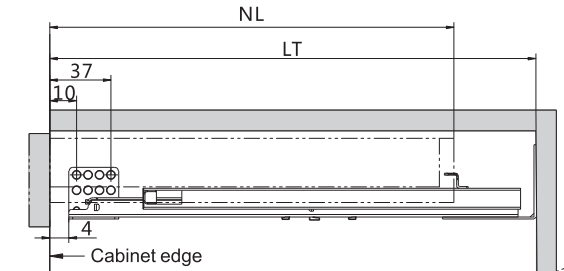


Locking device installation

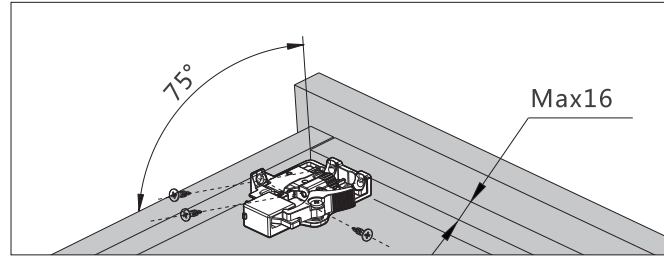


Drawer back preparation

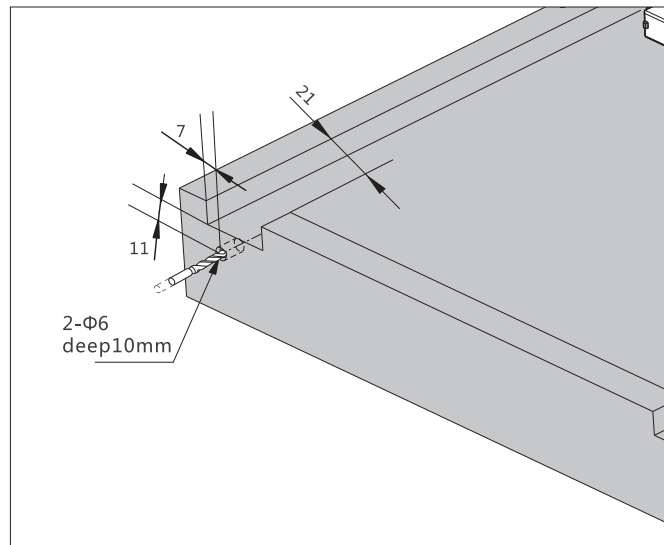


Rear mounting bracket preparation(mm)

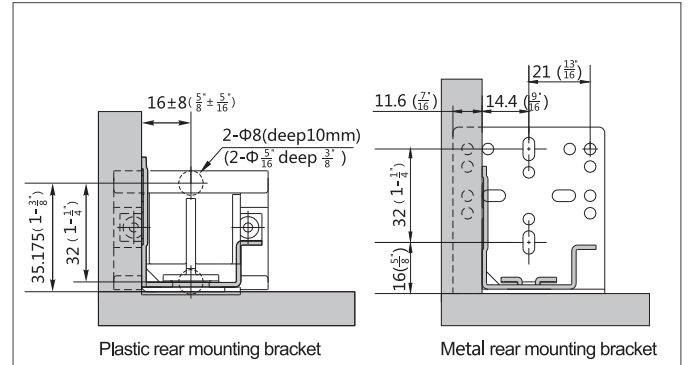



Screw positions of the slides

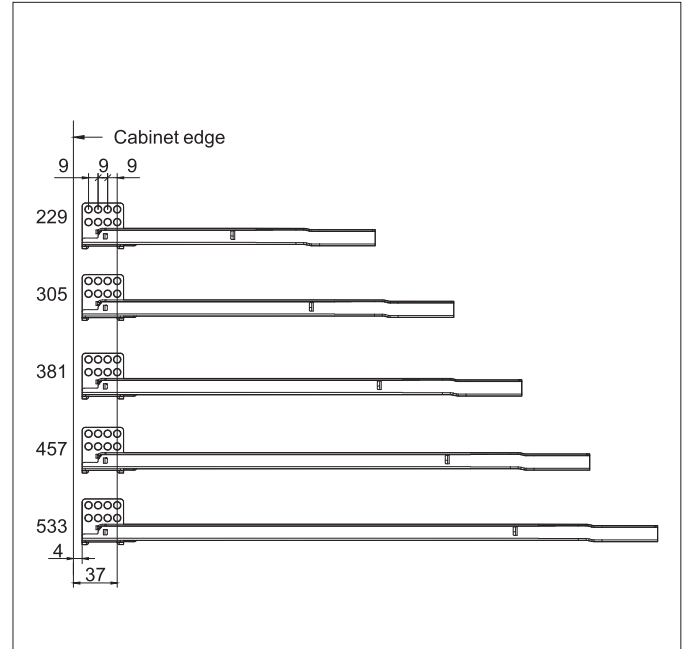


Drawer assembly

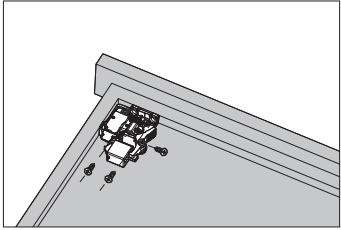



Fix the locking device onto the drawer bottom and fix the rear bracket onto the cabinet back.

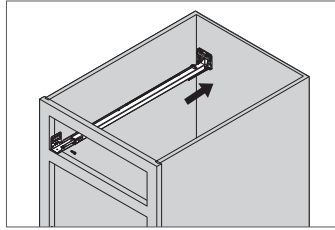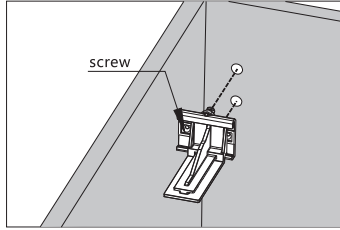


Inset slide end into rear bracket and fix the slide onto the cabinet

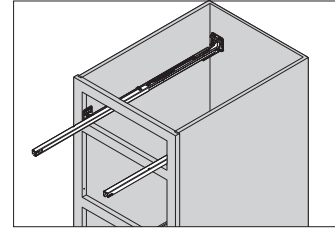

Pull out the slide, lay the drawer bottom onto the slide then push the drawer into the cabinet.

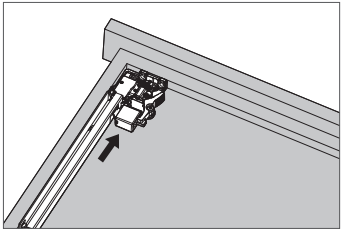
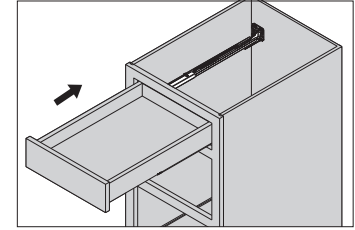


Adjustment

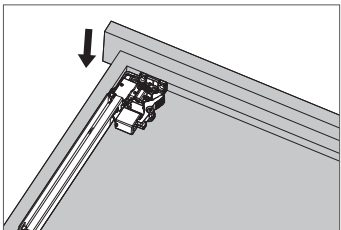

Height adjustment 0~+3mm

Removal

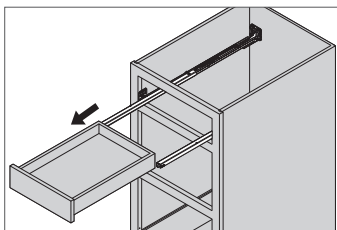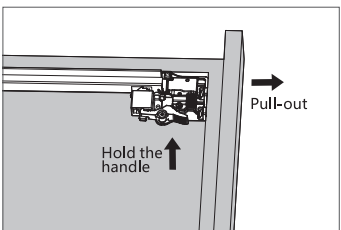

For removal, hold the handle and pull out the drawer.