Jackknob® Corp.

Installation Instructions For 7011, 7033, 7053, 7113, 7021, 7043, 7063, and 7123.

Surface Mounted Hinges

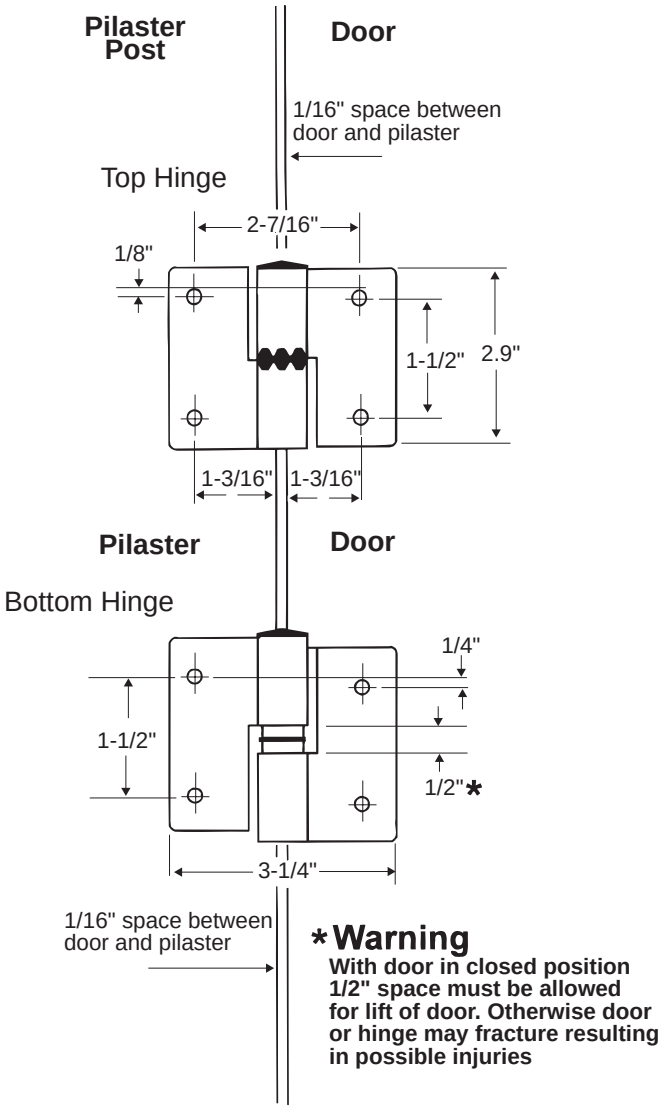
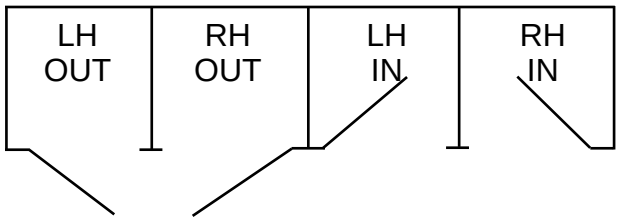
1. Locate and set hinge leafs to pilaster post per drawing.
2. Locate and set upper hinge leaf to door. Adjust male cam as necessary to achieve desired closed or “at rest” position.
3. With door in “at rest” position locate and set lower hinge leaf on door allowing 1/2" vertical space between hinge leaves as per drawing. This is to allow for the rise of the door when opening.
4. Install straight black hinge pin. Install retaining clip into pin to prevent the pin from coming out.
5. The hinges are handed for left hand (LH) and right hand (RH) swing. The same hinge may be used for LH inswing or RH outswing. The opposite hinge would be used for RH inswing and LH outswing.
6. To reverse the handedness of the hinge remove the nylon inserts from the top hinge and insert them into the bottom hinge. Remove the plastic inserts from the bottom hinge and insert them into the top hinge. This will change the direction of swing.
7. To adjust position of door closing, drive pintle from bottom leaf of top door hinge and turn to desired position.