Jacknob® Corp.

CUTOUT INSTRUCTIONS FOR DOOR INSERTS. FOR ALL 1" AND 7/8" LAMINATED DOOR HARDWARE.

Check all dimensions carefully.

1. Drill hole for bottom cam (dimension “A”) using the following drill size:
   Part # 1530 - (7/8" doors) - 5/8" dia.
   Part # 2810 - (1" doors) - 25/32" dia.
2. Drill hole for top pin using a .370" dia. drill (see warning below)
3. The centerline for the top and bottom should be .900" from the edge of the door AFTER the laminate is applied

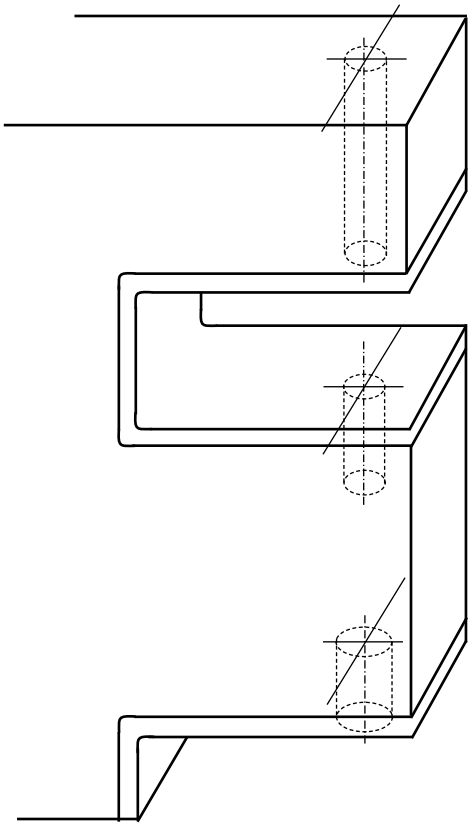

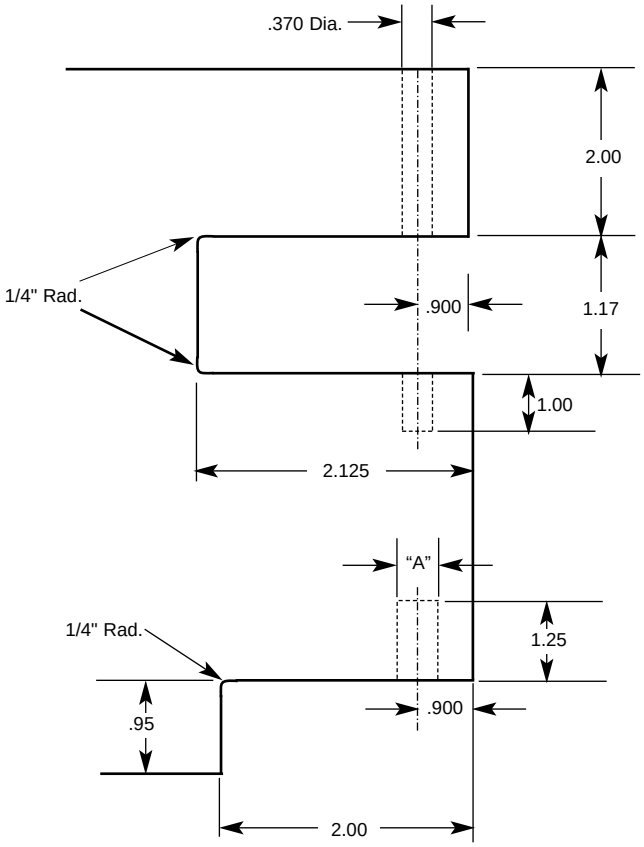

WARNING

- The limit of this hardware is 110˚. This hardware should not be used on outswing doors where there is no provision to stop the swing of the door at 110˚. After installation of the door, check to make sure that the door is stopped by a wall or other positive stop (such as Jacknob Part #4151 pilaster door stop) before contact is made between the hinge brackets and the door inserts.
- The hinge pin must fit tightly (a drive fit) to prevent slipping out.
- Failure to heed the above warnings can result in failure of the door and serious injury to personal.